STRAIGHT STITCH EMBROIDERY

1. Attach darning foot, Fig. 14, with arm (A) at the back of needle clamp (B). Place straight stitch pattern disc on machine.
2. Release pressure on the snap lock darner, Fig. 12, by pushing down on release (B).
3. Fully depress drop feed button (A) Fig. 11.
4. Place material, on which embroidery design has been drawn or stamped, between two frames of an embroidery hoop and stretch the material tightly.
5. Place the hoop and material under the darning foot and lower the presser bar.
6. Hold the hoop with both hands firmly against the machine bed. Hold the material within the hoop against the machine bed with index fingers of both hands. Caution: Be sure to keep fingers out of the path of needle to avoid injury.
7. Operate the machine at a fast speed and move the hoop as you sew, allowing the needle to follow the design as you would write with a pencil.
8. To resume normal sewing be sure to:
   A. Replace darning foot with regular zigzag foot.
   B. Push down on snap lock darner (A) Fig. 12.
   C. Fully depress feed return button (B) Fig. 11.

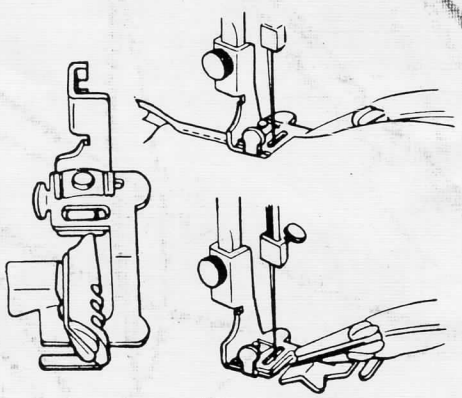

Fig. 15. Multiple Slot Binder

BINDING—See Fig. 15

The multiple slot binder is attached in the same manner as the regular presser foot. The binder has three slots on the side of the cone shaped scroll to hold various sizes of commercial folded bias tape. The larger opening at the end will hold 15/16" binding.

Binding should be cut to form a point and placed in the proper size slot or the end opening. The material to be bound is placed in the slot in the center of the cone shaped scroll and must be held in this position.

When the binding and the material to be bound have been properly placed in the binder and pulled through to the needle point, set the machine for a straight stitch, lower the presser bar and sew in the normal manner. The binder will turn under the edges of the binding and cover the edge of the material to be bound, all in one operation. Binder is adjustable and can be moved to allow sewing as close to the edge of the binding as may be desired.

SEWING ZIPPERS AND CORDING—See Fig. 16

Replace the regular presser foot with the combination zipper and cording foot. Set the machine for a straight stitch. Loosen the thumb screw on the horizontal bar and slide the zipper foot to the right or left of the needle and position so that the needle will stitch close to the edge of either the right or left side of the zipper or cording. A quilting guide bar is attached to the zipper foot and is adjustable to provide uniform spacing between rows of stitches when quilting.

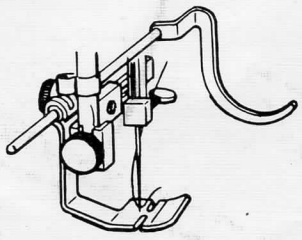

Fig. 16. Zipper and Cording Foot